

Models: LJ2026


Articus LED Bulkhead

Installation Instructions



IMPORTANT:

- Wall or Ceiling mount only.
- Before commencing installation Isolate all cables at the point of installation from the building Supply Mains.
- Installation by a Registered Electrician is recommended.
- Choose the mounting position carefully taking into account the fixing method, the services behind the wall and the IP rating required for that position.

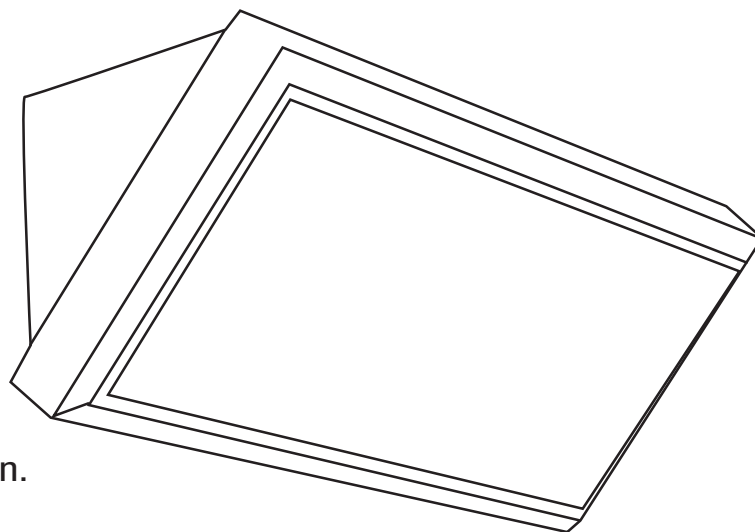

1. Unclip and remove the front trim.
2. Disassemble the lighting fixture by removing the 4 diffuser screws.
3. The LED array hinges outward to access the terminal block
NOTE: To maintain the IP rating ensure that the cable entry is sealed. Use silicone if necessary.
4. Connect the Supply Cable to the terminal block on the base plate.
Connect the Neutral wire to the N Terminal.
Connect the Phase wire to the L Terminal.
NOTE: Double Insulated - Do Not Earth.
5. Reassemble the diffuser onto the base.
6. Finally clip the front trim over the base assembly.

DO NOT: damage the LED unit or disassemble the electronic driver. This LED luminaire does not have a replaceable lamp or serviceable parts. **DO NOT OPEN** - Consult a registered electrician.

!!! Please leave this page with the installation!!!
