


SR2, SR3, SR4 Mounting and Wiring box-control gear enclosure Instructions



SR spotlight mounting base



Unscrew plastic end cap to get to mounting holes

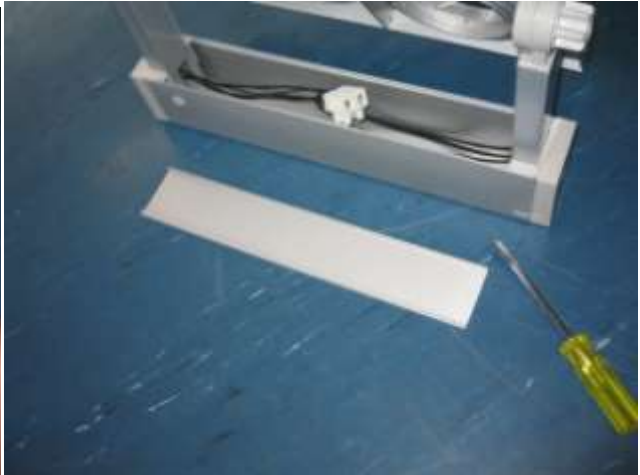

To get to wiring enclosure gently lever of panel with a flat head screw driver