


Gartner Superlux Ltd.

11 Mahunga Drive , Mangere Bridge, Auckland.
P.O. Box 13441, Auckland 6, New Zealand
Ph: 09-636-6092, Fax No.: 09-634-6802

BACK STOP FOR EQUIPOISE MODELS LSD, LSP & LSS

WHEN INSERTED AS SHOWN BELOW, IT PREVENTS THE FRAME'S LOWER SECTION FROM BEING PUSHED BACK PAST THE VERTICAL. THIS IS USEFUL FOR WHEN THE LSM3 WALL BRACKET IS USED TO PREVENT FRAME FROM HITTING WALL, OR ANY OTHER BASE WHERE SOME REAR RESTRICTION OR OBSTACLE IS TO BE AVOIDED.

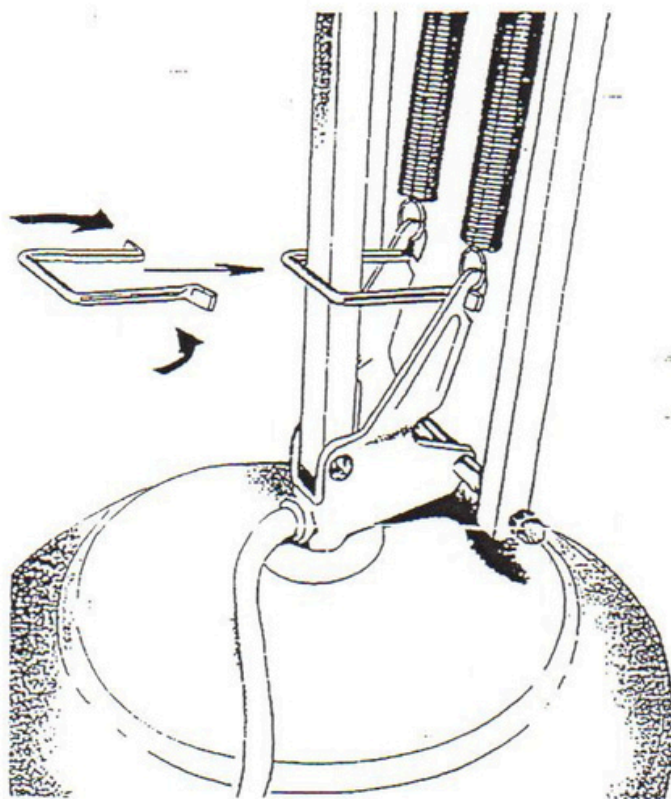

TYPICAL INSTALLATION.

TO INSTALL.
FROM THE REAR OF THE FRAME, PUSH LOWER SECTION OF FRAME FULLY FORWARD. SQUEEZE BACKSTOP LEGS TOGETHER AND INSERT INTO SPRING RETENTION SLOTS IN FOOT BRACKET OF FRAME.