

Model: SV-IP55

IP55 Eave Mount Downlight


Installation Instructions



1. **IMPORTANT : INSTALLATION SHOULD BE CARRIED OUT BY A REGISTERED ELECTRICIAN**
2. CLASS CA135

When choosing downlight position please ensure that MIC, SCB and HCB clearances are adhered to:


MIC = 50mm, SCB = 50mm, HCB = 50mm

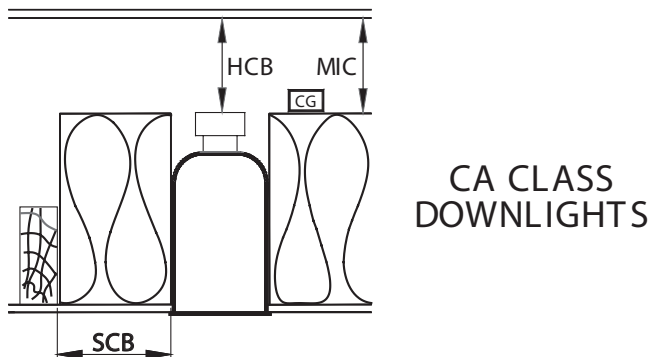

3. Minimum cavity depth is 120mm
4. Once location is chosen use the template to mark 3 hole centres
5. Use a 75mm diameter "abrasive cup" hole saw and 6.5mm diameter drill
6. Push the 2 screw anchor fully home into the holes
7. Use an SVE-T60 transformer and ensure it is placed in a clear area
(DO NOT COVER) and keep
50mm from side of downlight position
8. Secure to eave with 2 screws
9. Fit the 20W Halogen reflector lamp supplied
10. Tightly fasten the 4 screws to fix the front
face with neoprene gasket glass assembly

Note: Eave mounted fixtures are not naturally washed off by rain water. To maintain fixture occasionally clean the tempered glass and metal surround with a damp soft cloth.

Caution: Risk of fire, building insulation must not cover the luminaire. Refer to AS/NZS3000 before installation of Recessed Luminaires and associated equipment.

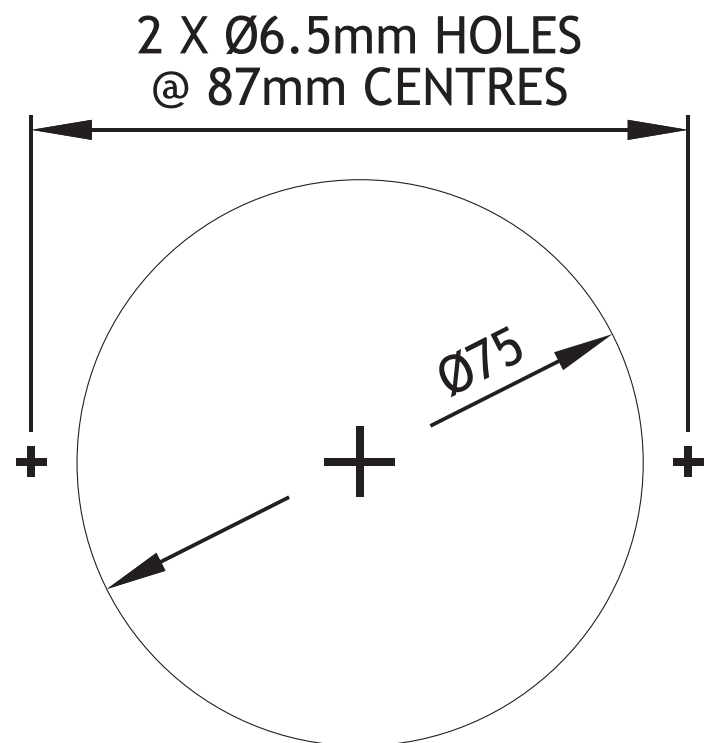

SV-IP55-SS