


Models - KPDS150 / KPDS300

PAR38 Dusk to Dawn Night Lights


Installation Sheet



- Install using a Registered Electrician.
- Disconnect power supply at mains board before commencing installation.
- Remove back plate and use the back mounting plate to mark the position of screw holes onto the mounting surface. Care should be taken to avoid drilling or fastening into concealed electrical wiring.
- Pass supply cable through back plate.
- Connect phase to brown and Neutral to blue as per diagram.
- Refit back plate to body ensuring gasket is in place.
- Mount to surface on prepared holes.
- Note: The floodlight should be wired to its own light switch, do not interconnect with other lights on same switch.
- Use with 230 volt Halogen, Energy Saver or LED PAR38 lamps.
- Ensure the neoprene seal is fitted on lampholder behind the lamp.

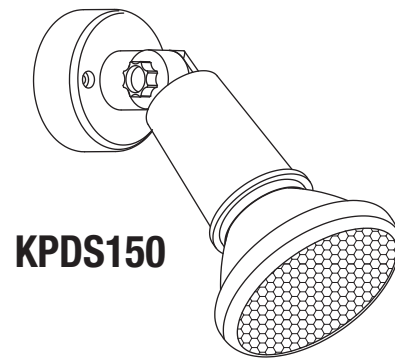

KPDS150

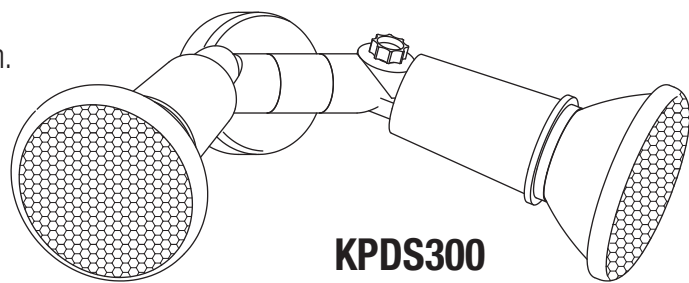

KPDS300

Important Positioning tips.

- Position so the PAR38 Lamps are **aiming downward**, with the small **photocell lense** at the top of base housing.
- As lamps often have some rearward spill lighting , lamps that are pointed too high will cause the photocell to strobe the lamps.
- Strobing will also occur if light from nearby white eaves or other surfaces is reflected back onto the photocell.

