

LED Pathway Light and Pre-wire Cable


Model: SLED-W145 & SLED-PREWIRE

Installation instructions



Important: Installation should be undertaken by a registered electrician.

- Supply 12Volts DC

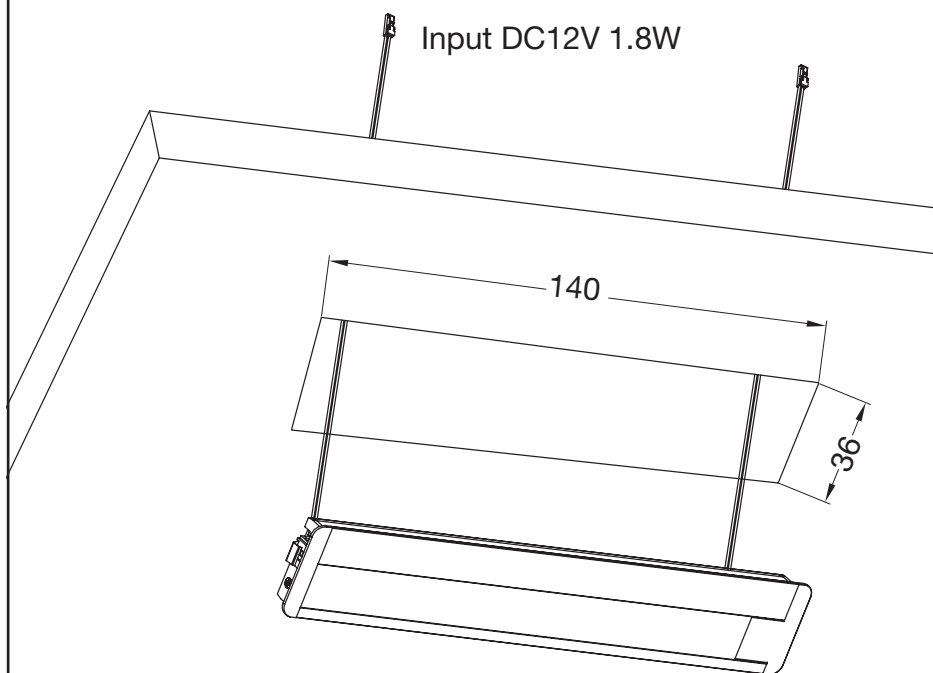

Cut hole 36 mmH x 140mmL. Connect cable either directly to 12V DC Superlux SLED driver or connect to SLED-PREWIRE cable.

SLED-PREWIRE cable is designed to make cabling quick and easy, it is best that the cable is installed in the timber framed wall before the wall lining is installed.