


Model: P5551

CORBAN STRIP LIGHT

Installation Instructions

superlux
we engineer light

IMPORTANT:
THIS LIGHT FIXTURE MUST BE INSTALLED BY A REGISTERED ELECTRICIAN.
ISOLATE POWER SUPPLY BEFORE INSTALLING.
ONLY TO BE INSTALLED INDOORS

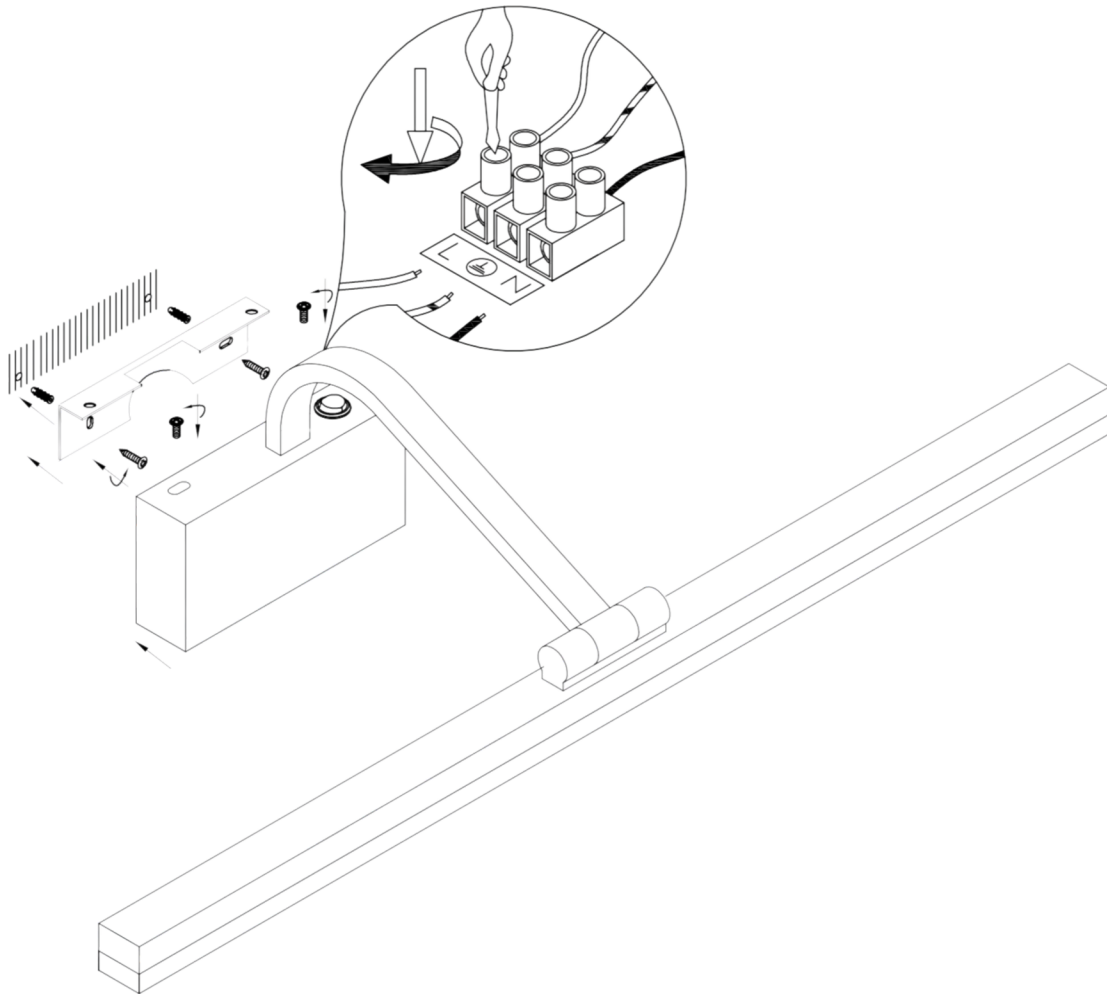

- Fix metal backplate to wall using 2 fasteners. Use fasteners suitable for the substrate the light is being mounted onto.
- Connect power supply cable: Phase to **L**, Neutral to **N**, Earth to 
- attach striplight base to metal wall bracket using the two screws.

IMPORTANT KEEP INSTRUCTION SHEET IN A SAFE PLACE FOR FUTURE REFERENCE.