

# Model: LSY

## LED Magnifier Lamp – 3 Diopter


### Instruction sheet

**superlux**  
we engineer light

**With Care and attention to the following information your LSY magnifying lamp will give you years of satisfactory service.**

#### General Features:

- For indoor use only – Do not use in wet areas.
- Clean with a soft dry cloth.
- Do not disassemble the magnifier
- Only use the plug-in power supply provided with the product.  
Connect the Co-axial DC socket and plug.
- Plug the A.C plug into the power socket and switch on at the wall.
- Turn LED lighting ON/OFF with the button switch on top of the Head.

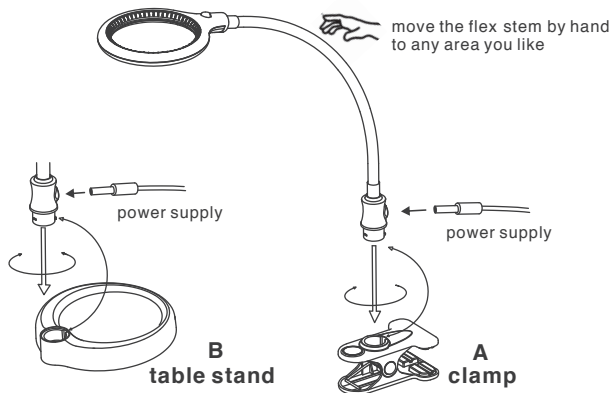

#### Mounting Lamp:

- A)** The lamp is supplied with a Clamp base for use on Horizontal bench tops 10mm to 30mm thickness.
- B)** Also supplied is a heavy weighted table base

To fit the magnifying lamp to the chosen base simply match the key on the bottom of the stem to the keyhole in the base. Push into the key hole and then turn left or right to hold it in place.

#### Technical:

- **Lamp power** is 6 watts LED, colour temperature 5,700K, 570 Lumens.
- **Power Supply** is FUJIA power adapter, 100-240V A.C 50 / 60 Hz. Output is 20 volts.

#### Important- Warning:

*Keep the magnifier lamp away from direct sunlight. When making adjustments to position only hold the flexible stem, DO NOT pull on the magnifying head. The manufacturer will not be responsible for damage caused by miss-use or modification of the product.*

**Gartner Superlux Ltd    Superlux Pty Ltd**