


AVVERTENZE:

- * IL PRODOTTO VA INSTALLATO DA PERSONALE SPECIALIZZATO
- * LA SICUREZZA DELL' APPARECCHIO È GARANTITA SOLO CON L'USO APPROPRIATO DELLE SEGUENTI ISTRUZIONI, PERTANTO È NECESSARIO CONSERVARLE.




WARNINGS:

- * THE FITTING MUST BE INSTALLED BY A PROFESSIONAL INSTALLER.
- * THE SAFETY OF THESE PRODUCTS IS GUARANTEED ONLY WITH THE APPROPRIATE USE OF INSTALLATION INSTRUCTIONS WHICH MUST BE PRESERVED.



ISTRUZIONI PER L'INSTALLAZIONE VICO-PALU' A PARETE:


1. Posizionare il braccio (1) sulla superficie di montaggio voluta.
2. Segnare i fori da eseguire (2) e togliere il braccio.
3. Forare la parete e inserire tappi ad espansione (3) (non forniti in dotazione) di dimensioni adeguate.
4. Inserire il cavo di alimentazione (4) all'interno del braccio.
5. Avvitare le viti (5) (non fornite in dotazione).

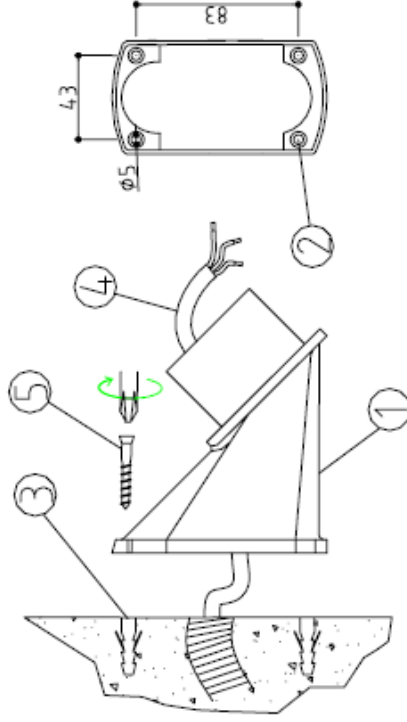

N.B. Per l'installazione su adattatore testapalo Comet 1461.000N seguire le istruzioni presenti nell'articolo.

INSTRUCTIONS FOR WALL INSTALLATION OF VICO AND PALU':

1. Position the bracket (1) on the mounting surface.
2. Mark the holes to make (2) and then take away the bracket.
3. Make the holes on the wall and insert the suitable expansion caps (3) (not included).
4. Insert the feeding cable (4) into the bracket.
5. Tighten the screws (5) (not included).

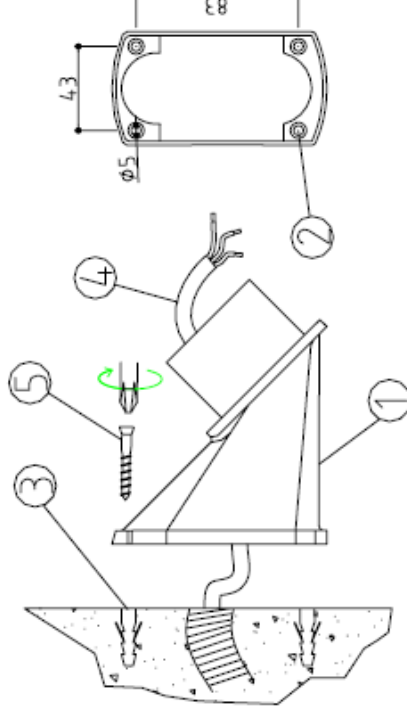

Pay Attention For the installation on the head-pole adapter Comet 1461.000N follow the instructions provided along with this fitting.